

| USB | Key |
|-----|------------|
| 00 | Кнопка нет |
| 01 | |
| 02 | |
| 03 | |
| 04 | A |
| 05 | B |
| 06 | C |
| 07 | D |
| 08 | E |
| 09 | F |
| 0A | G |
| 0B | H |
| 0C | I |
| 0D | J |
| 0E | K |
| 0F | L |
| 10 | M |
| 11 | N |
| 12 | O |
| 13 | P |
| 14 | Q |
| 15 | R |
| 16 | S |
| 17 | T |
| 18 | U |
| 19 | V |
| 1A | W |
| 1B | X |
| 1C | Y |
| 1D | Z |
| 1E | ! 1 |
| 1F | @ 2 |

| USB | Key |
|-----|------------|
| 20 | # 3 |
| 21 | \$ 4 |
| 22 | % 5 |
| 23 | ^ 6 |
| 24 | & 7 |
| 25 | * 8 |
| 26 | (9 |
| 27 |) 0 |
| 28 | Enter |
| 29 | Esc |
| 2A | Back Space |
| 2B | Tab |
| 2C | Space |
| 2D | _ - |
| 2E | + = |
| 2F | { [|
| 30 | }] |
| 31 | \ |
| 32 | (INT 2) |
| 33 | : ; |
| 34 | " , |
| 35 | ~ ` |
| 36 | < , |
| 37 | > . |
| 38 | ? / |
| 39 | Caps Lock |
| 3A | F1 |
| 3B | F2 |
| 3C | F3 |
| 3D | F4 |
| 3E | F5 |
| 3F | F6 |

| USB | Key |
|-----|-------------|
| 40 | F7 |
| 41 | F8 |
| 42 | F9 |
| 43 | F10 |
| 44 | F11 |
| 45 | F12 |
| 46 | PrtSc |
| 47 | Scroll Lock |
| 48 | Pause/Bk |
| 49 | Ins CP |
| 4A | Home CP |
| 4B | PgUp CP |
| 4C | Del CP |
| 4D | End CP |
| 4E | PgDn CP |
| 4F | Right CP |
| 50 | Left CP |
| 51 | Down CP |
| 52 | Up CP |
| 53 | Num Lock |
| 54 | / KP |
| 55 | * KP |
| 56 | - KP |
| 57 | + KP |
| 58 | Enter KP |
| 59 | 1 End KP |
| 5A | 2 Down KP |
| 5B | 3 PgDn KP |
| 5C | 4 Left KP |
| 5E | 6 Right KP |
| 5F | 7 Home KP |
| 60 | 8 Up KP |

| USB | Key |
|-----|-----------|
| 61 | 9 PgUp KP |
| 62 | 0 Ins KP |
| 63 | . Del KP |
| 64 | (INT 1) |
| 65 | WinMenu |
| 68 | F13 |
| 69 | F14 |
| 6A | F15 |
| 6B | F16 |
| 6C | F17 |
| 6D | F18 |
| 6E | F19 |
| 6F | F20 |
| 70 | F21 |
| 71 | F22 |
| 72 | F23 |
| 73 | F24 |
| 75 | Help |
| 7A | Undo |
| 7B | Cut |
| 7C | Copy |
| 7D | Paste |
| 7F | Mute |

| | |
|----|------------|
| 80 | VolumeUp |
| 81 | VolumeDown |
| 87 | (INT 3) |
| 88 | katakana |
| 89 | (INT 4) |
| 8A | kanji |
| 8B | hiragana |
| 8C | furigana |

| USB | Key |
|-----|---------------|
| 97 | 5 KP |
| 9A | Attn / SysRq |
| 9C | Clear |
| A3 | CrSel |
| A4 | ExSel / SetUp |

| USB | Key |
|-----|---------|
| E0 | Ctrl L |
| E1 | Shif L |
| E2 | Alt L |
| E3 | Win L |
| E4 | Ctrl R |
| E5 | Shift R |
| E6 | Alt R |
| E7 | Win R |

CP Над стрелками
KP НумПад

По материалам сайта
www.swordgreenline.narod.ru
www.mindrunway.msevm.com